

ADJUSTABLE MECHANICAL STOPS FOR COMPACT

**! THE USE OF THE MECHANICAL STOPS IS NOT RECOMMENDED FOR LEAVES LONGER THAN 2,5m
THE MECHANICAL STOPS CANNOT BE INSTALLED ON THE «COMPACT 1500» MODEL**

1. Insert the stop bracket into the box shaft, **making sure it is oriented in the same direction of the leaf support bracket**, then lock it with the seeger (Fig. 1 and Fig. 2)
2. Fix the two stop supports «A» to the box using the provided screws «B» and their fixing bolts
3. Insert the two «stop screws» «C» into the special housings on the stop supports, using the bolts «D» as shown in (Fig. 3 and Fig. 4)

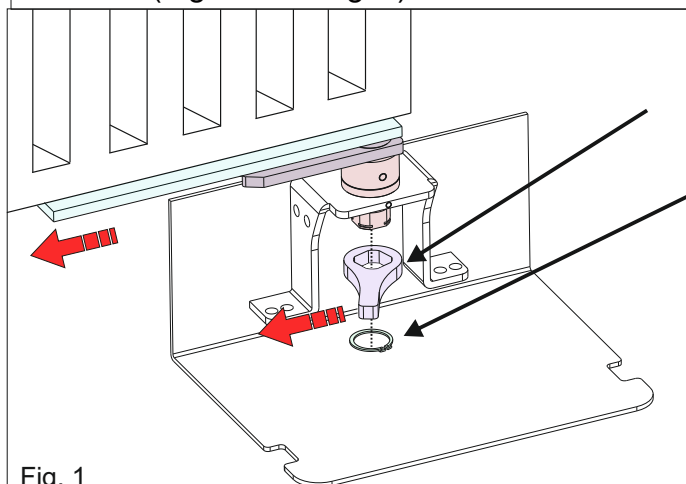


Fig. 1

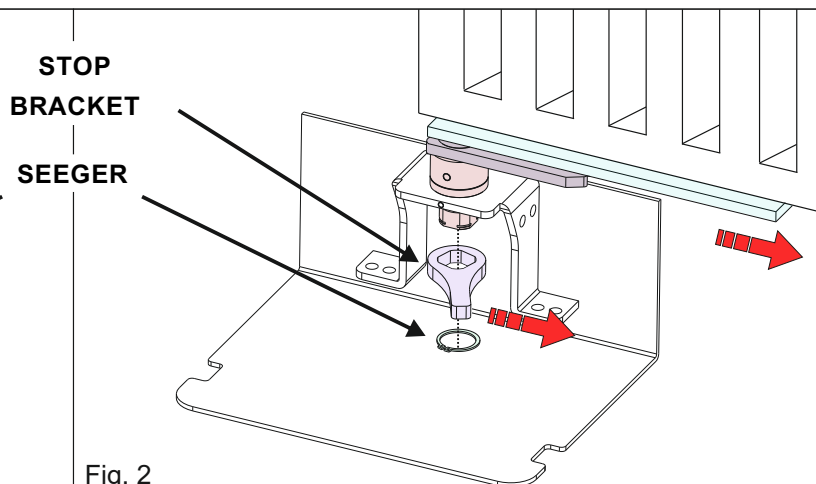


Fig. 2

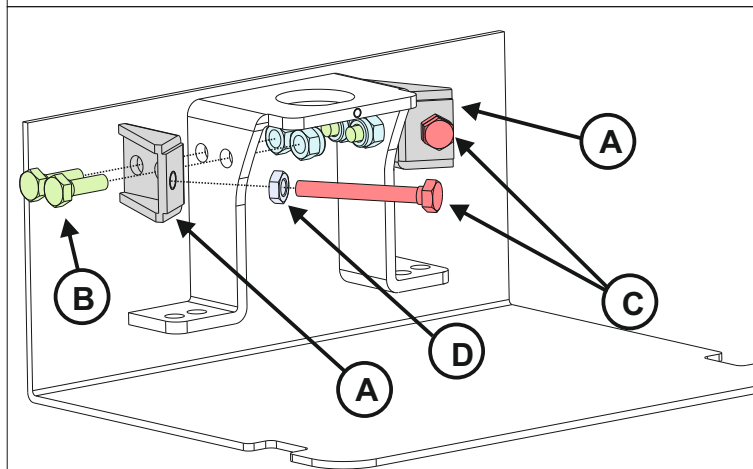


Fig. 3



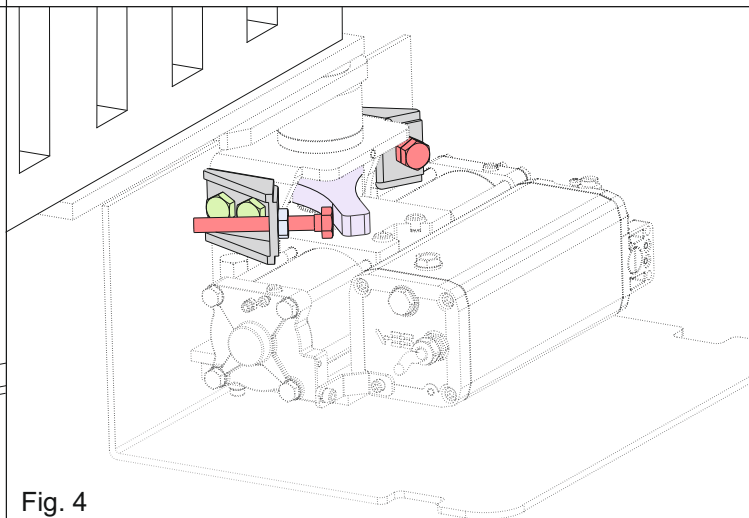


Fig. 4

LEFT OPERATOR

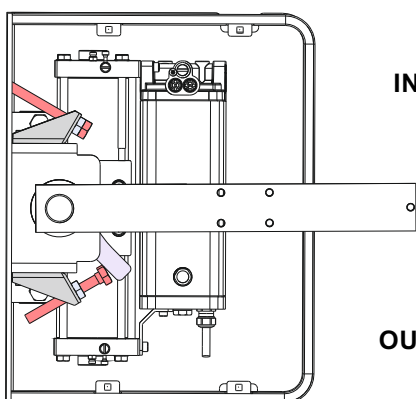

RIGHT OPERATOR

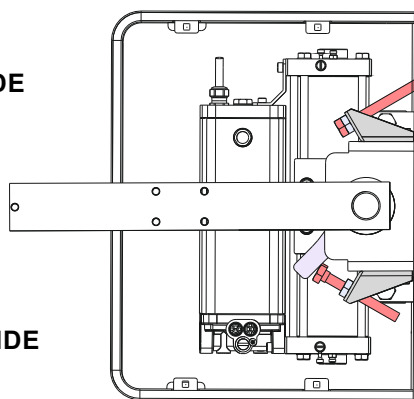


INSIDE

OUTSIDE

Fig. 5

Fig. 6

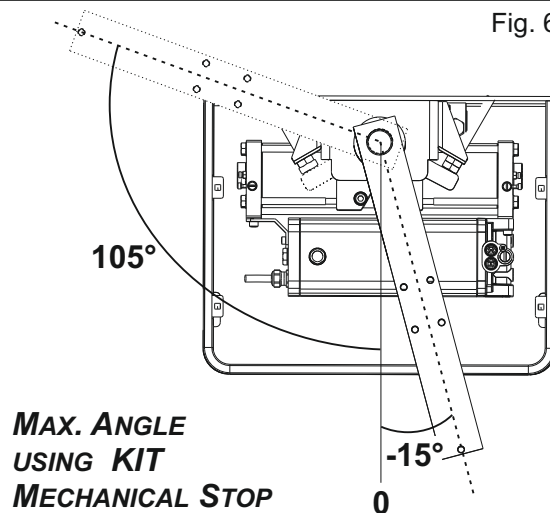

MAX. ANGLE
USING KIT
MECHANICAL STOP

0